



RUSSELLVILLE FIRE DEPARTMENT  
POLICY MANUAL

Policy Number:  
Section:  
Original Date:  
Revised Date:

**PURPOSE**

The purpose of this guideline is to define the criteria for pumping in pressure or volume on the during fireground operations.

**POLICY**

Each driver should be familiar with the RPM requirements of the apparatus in use, and other circumstances that dictate the need for switching from pressure to volume.

Pumps on all apparatus equipped with 2 stage pumps shall be set in the pressure (series) transfer valve position unless pumping at greater than half of the rated capacity of the pump, or as directed by a Company Officer.

Approved

Fire Chief